

Dishwasher

Bosch SMV4HVX00G — integrated

02

Integrated in the kitchen. Tablets are in the cupboard beside the dishwasher.

RUNNING A WASH

- 1 Load the dishwasher and add one tablet.
- 2 Press ON/OFF. It starts on Eco 50° by default.
- 3 Press a different programme button if you want one.
- 4 Add an option if you need it, then press Start.
- 5 The wash has finished when the display reads 0h:00m. It switches itself off a minute later.

PROGRAMMES

- **Eco 50°** — the everyday setting, and the most efficient.
- **Auto 45–65°** — adjusts to how dirty the load is.
- **Intensive 70°** — for pans and heavily soiled items.
- **Glass 40°** — gentle, for delicate glassware.
- **Express 65° – 1h** — a full wash in an hour.

OPTIONS

- **SpeedPerfect+** — shortens the run by between 15% and 75%.
- **Extra Dry** — a hotter final rinse and longer drying.
- **Half Load** — for smaller loads.

GOOD TO KNOW

For everyday use, Eco 50° with SpeedPerfect+ is a good balance of clean and quick.

SAFETY

- Machine Care must only be run with the dishwasher empty.
- Load only dishwasher-safe items.



FULL MANUFACTURER MANUAL

Bosch SMV4HVX00G — quick reference guide

https://media3.bosch-home.com/Documents/9001913454_B.pdf