

Washing Machine

Hoover H-WASH HBWOS 69TAME-80 — 9 kg, integrated

03

Integrated in the kitchen. Washing pods are in the cupboard beside the machine.

RUNNING A WASH

- 1 Load the drum and add a pod.
- 2 Turn the programme dial from OFF to the programme you want.
- 3 Adjust the temperature with the temperature button if you need to.
- 4 Adjust the spin with the spin button — it can be reduced, or the spin cancelled altogether.
- 5 Add any options, then press START/PAUSE.
- 6 'End' appears in the display when it has finished.
- 7 Wait for the door-locked light to go out before opening the door.

THE EVERYDAY PROGRAMME

- **All In One 59'** washes a full 9 kg load of mixed cottons and synthetics at 40°C in 59 minutes. It is the best choice for ordinary, lightly soiled washing.

OPTIONS

- **Prewashing** — an extra wash first, for heavily soiled loads.
- **Aquaplus** — washes in a much larger quantity of water.
- **Hygiene+** — holds the same temperature for the whole wash.

GOOD TO KNOW

Set the programme first, then the temperature, then the spin. Changing them in that order avoids resetting your choices.

SAFETY

- The water reaches very high temperatures during the wash.
- Wait until the door-locked light has gone out before opening the door.



FULL MANUFACTURER MANUAL

Hoover H-WASH HBWOS 69TAME-80 — instruction manual

<https://service.hoover.co.uk/media/cb0aixla/base.xml.pdf>