

Boiler

Worcester Bosch Greenstar CDi Classic

11

The boiler is in the cupboard by the garden patio doors. The thermostat is on the side of that cupboard.

ADJUSTING IT

- 1 **Central heating** — turn the heating control to the level you want, roughly 35°C to 90°C.
- 2 **Hot water** — turn the hot water control, roughly 40°C to 60°C.
- 3 When the burner is lit, the light under the ON/OFF button glows green. That is how you know heating or hot water is actually running.

IF THERE IS NO HEATING OR HOT WATER

- 1 Check the boiler has not been switched off — the power switch is inside the cupboard, to the left of the boiler.
- 2 Check the heating and hot-water controls on the outside of the cupboard are set to On or Auto, not Off.
- 3 Check the pressure gauge reads about 1.5 bar.
- 4 If the reset button and fault light are flashing, press reset for three seconds.
- 5 If that does not clear it, please stop and message me. Do not press reset repeatedly.

GOOD TO KNOW

Only the outside controls and the thermostat need touching. Everything inside the cupboard is set up and should be left alone.

SAFETY

- **If you smell gas:** do not smoke, use a lighter or strike matches. Do not operate electrical switches or unplug anything. Do not use the telephone or ring doorbells. Turn off the gas at the meter, open windows and doors, warn the neighbours and leave the building. Well away from the house, call the National Gas Emergency Service on **0800 111 999**.



FULL MANUFACTURER MANUAL

Worcester Bosch Greenstar CDi Classic — operating instructions

<https://www.worcester-bosch.co.uk/support/literature/download/6720815728>