

Thermostat

Worcester Bosch Comfort II RF

12

On the side of the boiler cupboard, beside the garden patio doors. It controls the heating and the hot water separately.

CHANGING THE TEMPERATURE

- 1 Turn the dial clockwise for warmer, anticlockwise for cooler.
- 2 The new temperature flashes for a few seconds, then applies.
- 3 This is a temporary override. It lasts until the next programmed time and then returns to the schedule — it has not failed to save.

HOT WATER

- Leave the mode on **AUTO** for both heating and hot water.
- If you need more hot water than the schedule gives you, set the hot water to **ONCE**.

GOOD TO KNOW

Please set the heating back to 18°C before you leave.

SAFETY

- Please do not set Holiday mode — it turns both the heating and the hot water off.
- Please do not hold the menu and return buttons together; that opens the installer settings.



FULL MANUFACTURER MANUAL

Worcester Bosch Comfort II RF — operating instructions

<https://www.worcester-bosch.co.uk/support/literature/download/6720810965>